

Necessary tools for assembly:


a star screwdriver








and a rubber hammer




Your Package Should Contain:

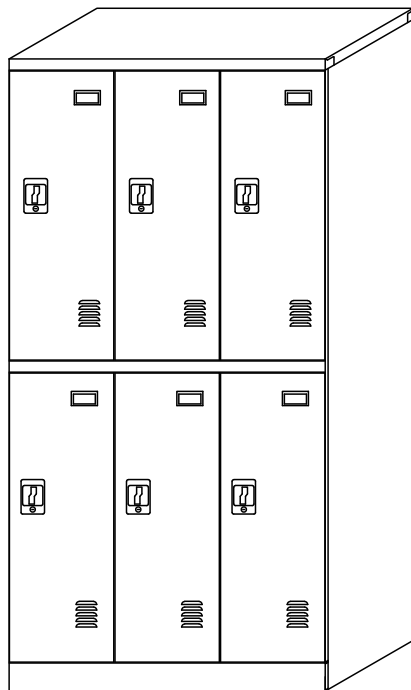


KDCL7236/6

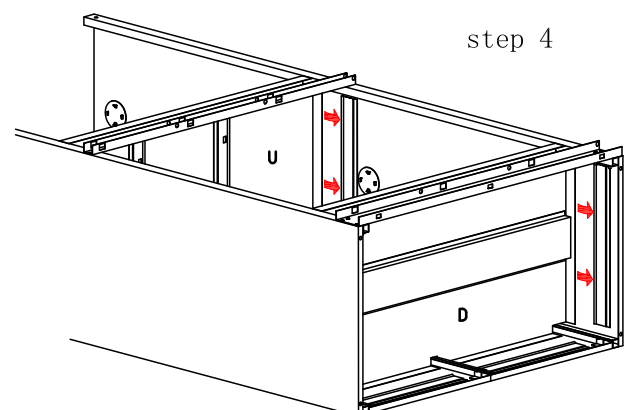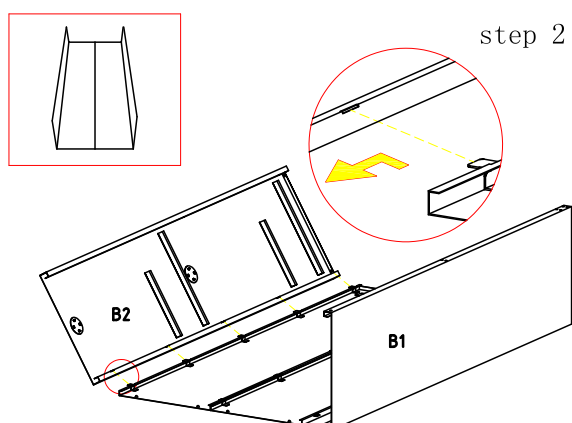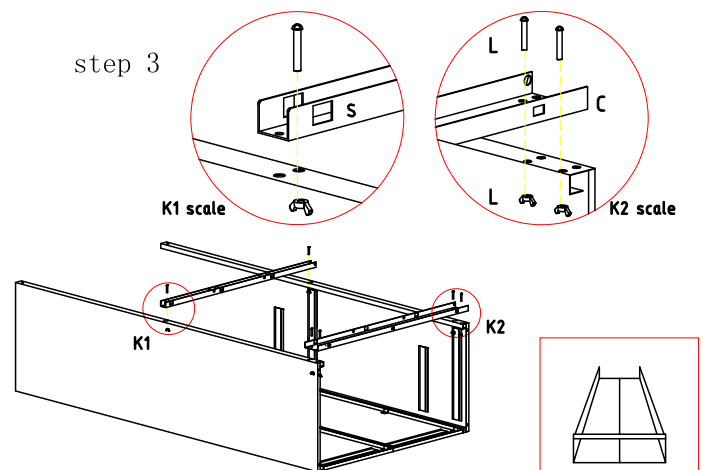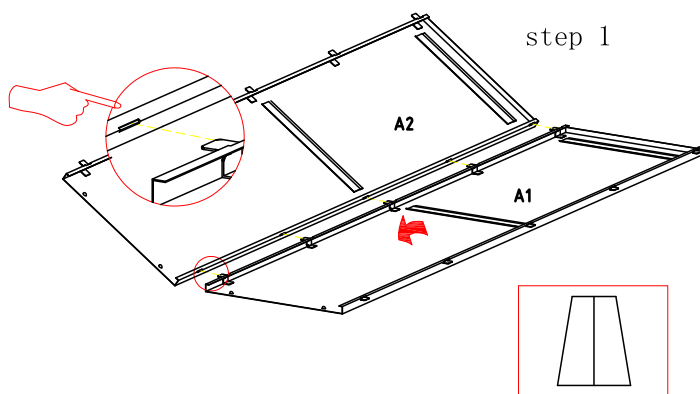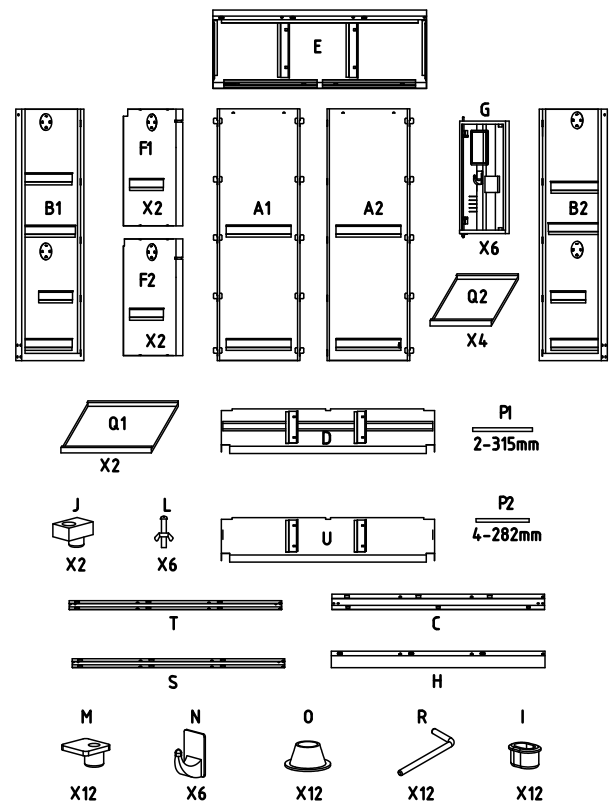


step 5

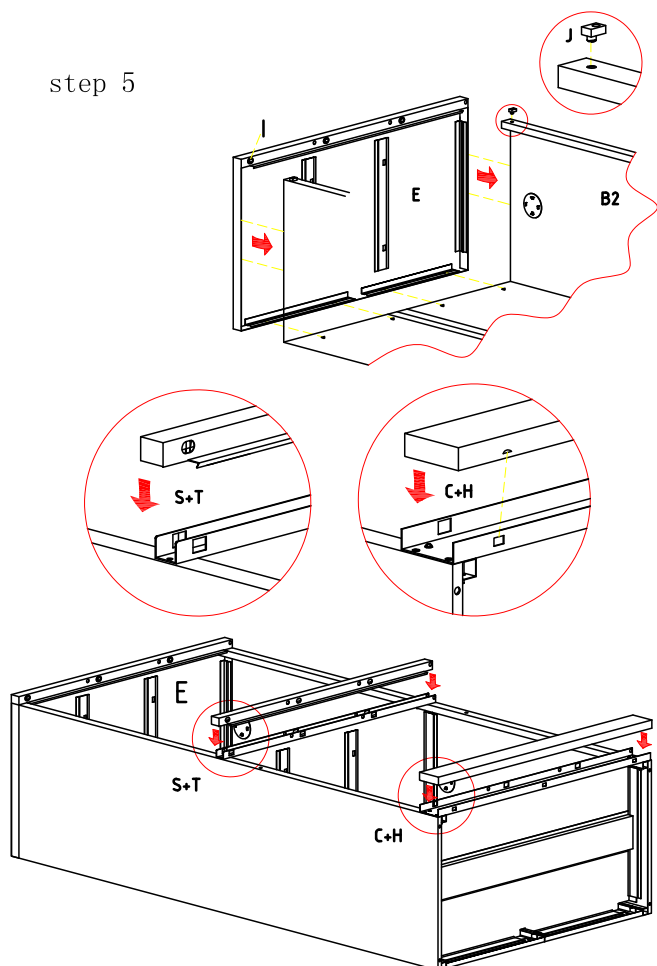


step 6

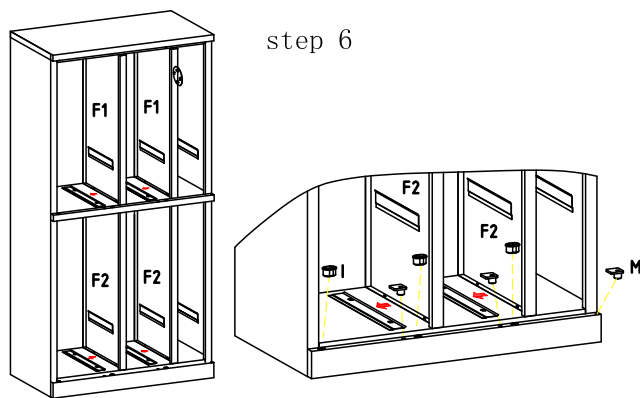


step 7

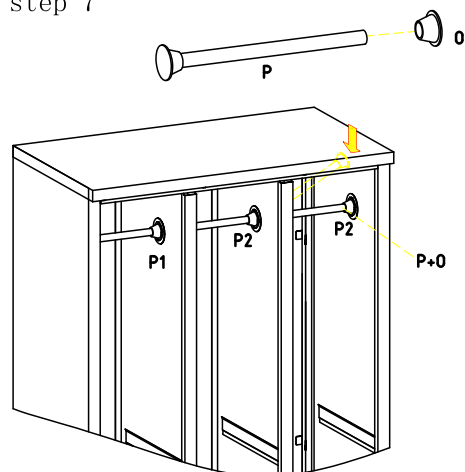

step 8

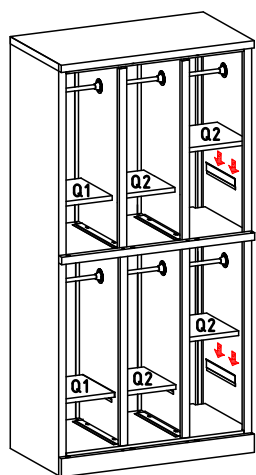

step 9

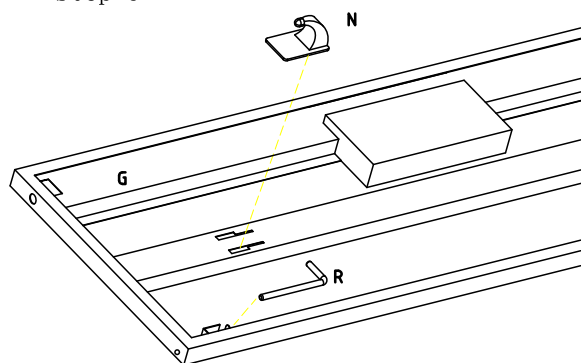

step 10

